


8803, 8853 INSTALLATION INSTRUCTIONS

SELECT PROPER APPLICATION FROM ILLUSTRATIONS BELOW. THEN FOLLOW INSTALLATION INSTRUCTIONS ON GIVEN PAGE.

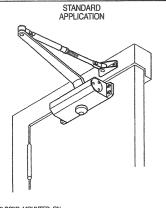

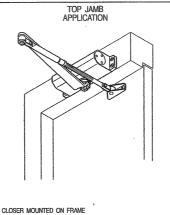

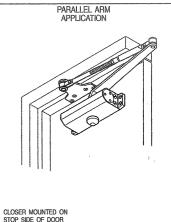

CLOSER MOUNTED ON HINGE SIDE OF DOOR

USE PAGE2

ON STOP SIDE OF DOOR

USE PAGE3

USE PAGE4

42135

PERIODIC MAINTENANCE


NONE REQUIRED OTHER THAN TO CHECK SECURITY OF FIXINGS ON REGULAR BASIS.

	STANDARD		TOP JAMB		PARALLEL ARM		1
	Max. Door Width (mm)	Max. Door Weight (kg)	Max. Door Width (mm)	Max. Door Weight (kg)	Max. Door Width (mm)	Max. Door Weight (kg)	Max. Door Opening Angle
8803,8853	950	60	950	60	850	40	105°
	SIZE 3		SIZE 3		SIZE 2		

ON FIRE DOORS USE MINIMUM POWER SIZE 3

FINAL ADJUSTMENT AND REGULATING PROCEDURES


REGULATING DOOR SPEED AND LATCHING SPEED TURN SPEED REGULATING SCREW CLOCKWISE TO SLOW DOWN OR COUNTERCLOCKWISE TO SPEED UP DOOR MOVEMENT.

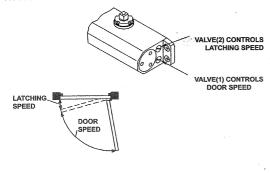

CAUTION: Take care when adjusting valves to ensure that... they are not wound counterclockwise too far as this could disengage them and allow fluid to be lost.

ADJUSTING FOOT FOR ADDITIONAL **CLOSING POWER**

STANDARD POSITION

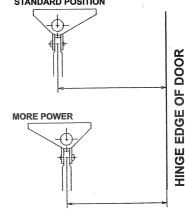

PAGE

1

INSTALLATION CLOSER MOUNTED ON STANDARD APPLICATION HINGE SIDE OF DOOR INSTRUCTIONS RIGHT HAND DOOR ILLUSTRATED STOP SIDE STOP SIDE SAME DIMENSIONS HINGE SIDE HINGE SIDE APPLY FOR LEFT HAND DOOR-MEASURED FROM LEFT RIGHT HINGE C . HAND DOOR HAND DOOR :Ø3. 8 7 Ø5 TAPPING SCREW M5 MACHINE SCREW (OPTION): Ø4. C OF HINGE PIVOT FOOT DOOR 270 ᆼ FRAME FRAME 22 25 DOOR SPEED REGULATING VALVES TOWARD HINGE EDGE OF DOOR Œ 165 165 D TIGHTEN LOCKNUT SECURELY WHEN ROD A 1. MARK LOCATION OF ATTACHING SCREWS ON IS AT RIGHT ANGLE TO DOOR. DOOR AND FRAME AS SHOWN ABOVE, DRILL SEE ILLUSTRATION BELOW. SIZES TO BE USED AS SHOWN. 2. ATTACH CLOSER TO DOOR WITH SPEED LEFT HAND DOOR REGULATING VALVES TOWARD HINGE. Ф В ATTACH FOOT TO FRAME WITH PIVOT AWAY FROM HINGE AS ILLUSTRATED MAIN ARM ROD BELOW. ANGLE RIGHT PIVOT AWAY FROM HINGE POSITION OF MAIN ARM WHEN LOCKNUT ASSEMBLING DOOR TO SPINDLE PIVOT AWAY FROM HINGE PO RIGHT HAND DOOR SHOWN EDGE SECURE MAIN ARM TO FRAME ARM AT DOOR ELBOW WITH SCREW AND TIGHTEN. HINGE LEET HAND PF Е ADJUST AND REGULATE DOOR CLOSER AS DOOR SHOWN DIRECTED ON PAGE1 FOR SPEED. F С INSTALL PINION CAP AND COVER AS FOLLOWS ASSEMBLE MAIN ARM TO CLOSER WITH INDEX MARK ON SPINDLE ALIGNED WITH AXIS OF ARM AS ILLUSTRATED BELOW, ATTACH ARM WITH WASHER AND SCREW. TIGHTEN SECURELY USING SPANNER. RIGHT HAND DOOR PINION CAP # ROD MAIN ARM RIGHT ANGLE POSITION OF COVER(STANDARD ON 8853/OPTIONAL, EXTRA ON 8803) MAIN ARM WHEN ASSEMBLING TO SPINDLE OCKNUT INDEX MARK PAGE ON SPINDLE

